RF-RBREC Wireless Amplified Audio Receiver

Package contents

Wireless receiver

Speaker cable (2)
3 ft (91.5 cm)

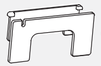
Cable spool

Remote control

AC power cable

User Guide

Quick Setup Guide

Initial setup

1 Unpack the package contents

2 Enable the remote control battery

Remove the tab from the bottom of the remote control.

3 Set up the Wireless HD Receiver

The diagram shows a typical Wireless HD Receiver setup for listening to music throughout your home. For more information on how to set up this receiver for use with a 7.1 home theater setup using this Wireless HD Receiver and the Wireless HD Audio Starter Kit (RF-RBKIT), see your *User Guide*.

The wireless receiver is connected to two home speakers and joined to your existing Rocketboost network.

See the following steps for further setup details.

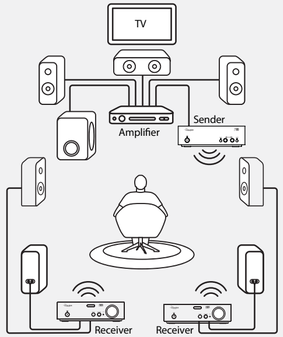

Connecting the speakers to the wireless receiver

- Connect the right speaker to the right speaker-out terminals on the wireless receiver. Use a red speaker wire to connect the **red (+)** speaker-out terminal and a black speaker wire to connect the **black (-)** speaker-out connector. Repeat this step to connect the left speaker.

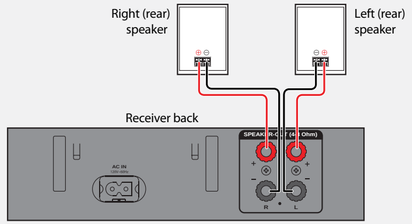

Connecting the wireless receiver to an AC power outlet

- Connect one end of the AC power cord to the **AC IN** connector on the back of the wireless receiver, then plug the other end of the AC power cable into an AC power outlet. The Standby indicator turns on.

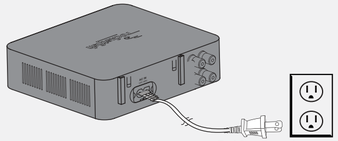
To AC power outlet

Establishing communication

All Rocketboost devices must be "joined" or wirelessly connected to your Rocketboost hub device so that audio can be sent between them. The following steps describe how to join Rocketboost devices. For additional information, see the Rocketboost network notes on the right.

1 If possible, bring your Rocketboost hub device, and the wireless receiver which you'd like to join to the hub, into the same room.

2 Press the ⏻ on the Rocketboost hub device to turn it on.

3 Press the ⏻ on the wireless receiver to turn it on.

4 Press and hold the ⏻ on the Rocketboost hub device for more than three seconds to put it into joining mode. The power indicator starts blinking rapidly and the unit will stay in joining mode for 30 seconds.

5 Press and hold the ⏻ on the wireless receiver for more than three seconds to put it into joining mode.

- When successfully joined, the power indicator LEDs on both products will stop blinking and stay on.
- If joining fails after 30 seconds, the power indicator LEDs will begin flashing at a slower rate. If this occurs, repeat the above steps.

For additional information, see your *User Guide*.

Using your wireless receiver

1 Turn on your Rocketboost wireless sender and wireless receiver. The power indicator LEDs should light steadily. If they are blinking you need to rejoin the wireless receiver and the Rocketboost wireless sender. See *Establishing communication* steps above.

2 Turn on the audio source connected to the Rocketboost sender. Make sure the volume of the audio source is turned up and not muted, otherwise no audio will be sent over the Rocketboost network.

3 Play music from the audio device connected to your Rocketboost wireless sender.

4 Adjust the volume level on the wireless receiver.

If you have multiple audio sources in your Rocketboost network, press the Source button on the wireless receiver to hear the next audio source. Press the Source button again to cycle through all available audio sources.

Rocketboost network notes:

Every Rocketboost network must contain one hub device, which helps devices join the network. The network can have only one hub, which you can enable using the hub switch on the back of all Rocketboost wireless senders and wireless sender/receivers. If this is your first Rocketboost product, you should make this device the hub, if you already have Rocketboost products, you should disable hub mode on this device.

Important: Hub devices must always have power for your network to operate. The hub device can be in standby (power-saving) mode, but must stay plugged in.

with rocketboost wireless

QUICK SETUP GUIDE

© 2011 BBY Solutions, Inc., All Rights Reserved. Distributed by Best Buy Purchasing, LLC, 7601 Penn Avenue South, Richfield, MN USA 55423-3645

ENGLISH 11-0063